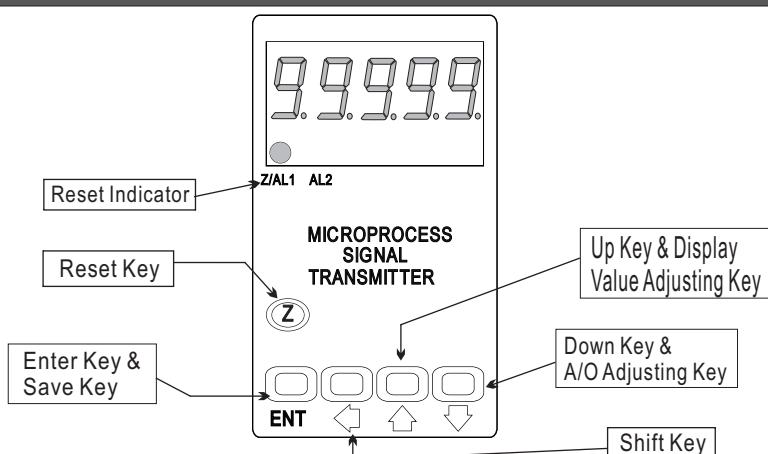


* Please understand key indicators & functions at the first operation.

FRONT PANEL & KEY FUNCTIONS

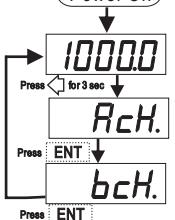


Key Name	Symbol	Descriptions
Reset Key	(Z)	1. Press this key to enable the reset function & reset indicator (Z) is light; press this key again to disable the reset function & reset indicator (Z) is dark.
Enter Key & Save Key	ENT	1. In the measuring status, press this key can enter to parameter pages. 2. In the parameter setting, press this key can save the value & go to next parameter.
Shift Key	◀	1. In the parameter setting , press this key can move the cursor left.
Up Key & Display Value Adjusting Key	↑	1.In the measuring status, press this key for 3 sec can enter to display adjustment of "ZERO" & "SPAN" 2. In the parameter setting, press this key can increase the digits.
Down Key & A/O Adjusting Key	↓	1. In the measuring status, press this key for 3 sec can enter to analog output adjustment. 2. In the parameter setting , press this key can decrease the digits.

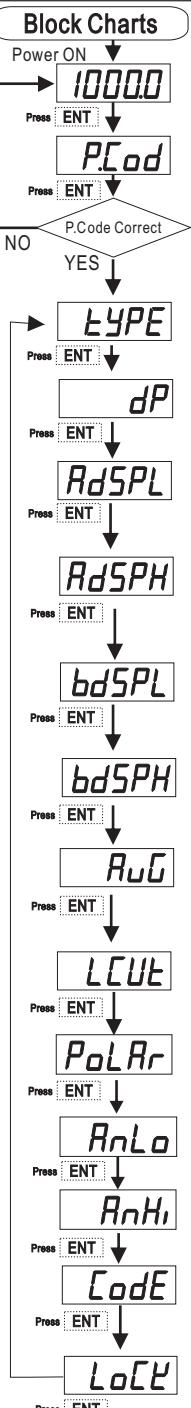
- **1. The following block charts are parameters codes, parameter codes & parameters will alternate flashing if the parameters can be modified.
- 2. To modify the parameters, please press , and press ENT to save the parameters after the modification.
- 3. Please don't forget the new pass code after modification.
- 4. In any pages, press & , or don't press any keys for 2 minutes that will back to measuring status.

GENERAL MODE OPERATING PROCEDURES

Block Charts	Display	Descriptions	Default
Display: "ZERO" & "SPAN" Adjustment			
Power On	Measuring Status	Present value for measurement.	
	Display (dZEro) Adjustment (dZEro)	Press to select adjusting speed rate, press to modify the zero value. PS: To use this function to adjust the real zero value.	
Analog Output: "ZERO" & "SPAN" Adjustment			
Measuring Status	A/O Zero Adjustment (AZero)	Present value for measurement.	
	A/O Span Adjustment (ASPA)	Press to select adjusting speed rate, press to modify the A/O zero. PS: To use this function to adjust the real A/O zero.	
Measuring Status	A/O Span Adjustment (ASPA)	Press to select adjusting speed rate, press to modify the A/O span. PS: To use this function to adjust the real A/O span.	

Display Value: Preview Input A & Input B			
	Measuring Status	Present value for measurement.	
	Preview Input A Display Value (A CH.)	Press $\triangle\downarrow$ to show the current input A display value.	Input A Display Value
	Preview Input B Display Value (B CH.)	Press $\triangle\downarrow$ to show the current input B display value.	Input B Display Value

PROGRAMMING MODE OPERATING PROCEDURES

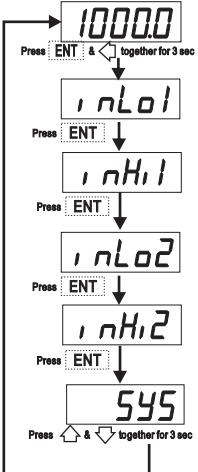
Block Charts	Display	Descriptions	Default
	Measuring Status	Present value for measurement.	
	Pass Code (P.Cod)	Press $\triangle\downarrow$ to enter pass code. Pass code is correct that will enter to parameter groups. Pass code is wrong that will back to measuring status.	00000
	Math Type Setting (tYPE)	Press $\triangle\downarrow$ to select the math type of input A & input B; A (Sqr \sqrt{A}), A (Abs.A), A+B (Add.Ab) , A-B (Sub.Ab) , AXB (MUL.Ab) , A/B (div.Ab) , A&BH (And.Hi) , A&BL (And.Lo) .	59rA
	Decimal Point Setting (dP)	Press $\triangle\downarrow$ to select decimal point (0, 1, 2, 3, 4) EX: if the value shows "0.00" that means the decimal point is 2 digits.	00000
	Input A Display Low Scale (AdSPL) Setting	Press $\triangle\downarrow$ to modify display low scale for the input signal zero value. EX: If the input signal is 4~20mA; 4mA is shown display 0.00, this parameter must be set for 000.00.	Customers specify
	Input A Display Hi Scale Setting (AdSPH)	Press $\triangle\downarrow$ to modify display high scale for the input signal span value. EX: If the input signal is 4~20mA; 20mA is shown display 100.00, this parameter must be set for 100.00.	Customers specify
	Input B Display Low Scale Setting (BdSPL)	Press $\triangle\downarrow$ to modify display low scale for the input signal zero value. EX: If the input signal is 4~20mA; 4mA is shown display 0.00, this parameter must be set for 000.00.	Customers specify
	Input B Display Hi Scale Setting (BdSPH)	Press $\triangle\downarrow$ to modify display high scale for the input signal span value. EX: If the input signal is 4~20mA; 20mA is shown display 100.00, this parameter must be set for 100.00.	Customers specify
	Display Average Setting (AvG)	Press $\triangle\downarrow$ to modify display average (1~99). PS: Please use this function for stable display value when input signal is unstable.	00005
	Display Low Cut Setting (LCUt)	Press $\triangle\downarrow$ to modify display low cut to 0 (0~99).	00000
	A/O Polarity Setting (PoOLAr)	Press $\triangle\downarrow$ to modify output is positive pole or negative pole. PS : Voltage output ,NO: positive pole output (0~+10V) YES: positive & negative pole output (-10~+10V)	no
	A/O Low Scale Setting (AnLo)	Press $\triangle\downarrow$ to adjust A/O low scale to correspond to the display value. EX : A/O is 0~10V, the display is 10.0 to output 0V, this value must be set for 10.0.	00000
	A/O Hi Scale Setting (AnHi)	Press $\triangle\downarrow$ to adjust A/O hi scale to correspond to the display value. EX : A/O is 0~10V, the display is 90.0 to output 10V, this value must be set for 90.0.	99999
	Pass Code Setting (CodE)	Press $\triangle\downarrow$ to modify pass code (0~19999). PS: Please don't forget the new pass code after modification.	00000
	Key Lock Setting (LoCK)	Press $\triangle\downarrow$ to lock the keys, using key lock function only can view the parameters, but cannot modify any values. PS: no (unlock) ,YES ("ENT" unlock , others lock).	no

Error Code of Self-Diagnosis

Display	Descriptions	Display	Descriptions
, aFL	Input signal is over 120% of input range.	daFL	Math operating result is over display range (19999).
-, aFL	Input signal is under -20% of input range.	-daFL	Math operating result is under display range (-19999).
RoFL	Input signal A is over display range (19999).	boFL	Input signal B is over display range (19999).
-RoFL	Input signal A is under display range (-19999).	-boFL	Input signal B is under display range (-19999).
RdEr	Input signal is over 180% of input range or meter error.	E-00	EEPROM reading/writing suffers the interference (about 1 million times).

**Please check the wiring connection is correct first, if the problem still exist, please return the meter to the factory.

CALIBRATION OPERATING PROCEDURES

Display	Descriptions	Default
	Measuring Status Present value for measurement Press ENT & < together for 3 sec will enter to calibration operating procedures.	
Input Low Scale 1 Calibration (inLo1)	1. Input standard low scale signal to input 1. 2. Press <><> to calibrate input low scale.	
Input Hi Scale 1 Calibration (inHi1)	1. Input standard hi scale signal to input 1. 2. Press <><> to calibrate input hi scale.	
Input Low Scale 2 Calibration (inLo2)	1. Input standard low scale signal to input 2. 2. Press <><> to calibrate input low scale.	
Input Hi Scale 2 Calibration (inHi2)	1. Input standard hi scale signal to input 2. 2. Press <><> to calibrate input hi scale.	
System Setting Page (SYS)	1. Finish calibration operating procedures will enter to system setting group. 2. Press & & together to back to measuring status.	

Warning: Calibration of this meter requires a standard signal with 0.01% accuracy or better and an external meter with 0.005% accuracy or better.