


KEY FUNCTIONS

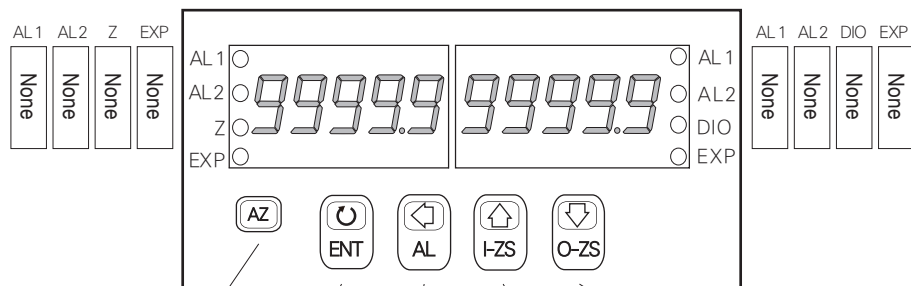

Function Key Enter Key & Save Key Shift Key & Output Setting Key Up Key & Display Setting Key Down Key & A/O Setting Key

Measuring Status

Parameter Page


Parameter Setting

		Enter to parameter groups	Hold for 3 sec. enter to Alarm Setpoint Modification	Hold for 3 sec. enter to Display Group Setting	Hold for 3 sec. enter to A/O Group Setting.	 In any status can back to measuring status
			Enter to parameter setting	Back to the last parameter page	Go to the next parameter page	
		Save the value	Move the cursor left	Increase the digit	Decrease the digit	

ERROR CODE OF SELF-DIAGNOSIS

10FL	Input signal is over 120% of input range.
-10FL	Input signal is under -10% of input range.
RdEr	Input signal is over 180% of input range or meter error.
doFL	Input signal is over display range (999999).
-doFL	Input signal is under display range (-199999).
E-00	EEPROM reading / writing suffers the interference (about 1 million times).

 WIRING CONNECTION



PROGRAMMING MODE OPERATING PROCEDURES

