
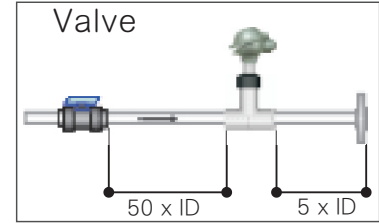
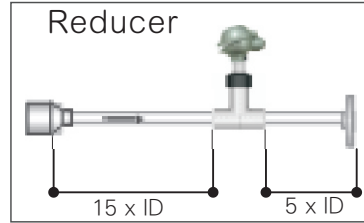
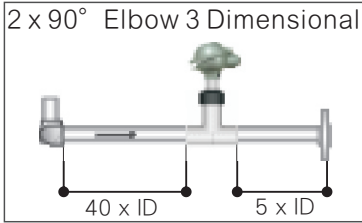
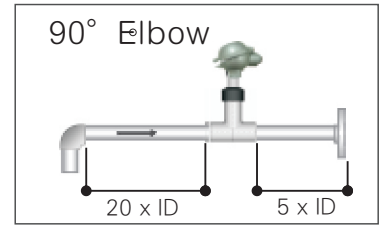
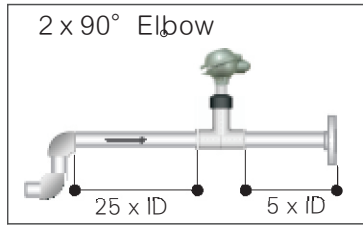


## ■ INSTALLATION

- Installation guidelines: Please refer to EN ISO5167-1 (ID is internal diameter)

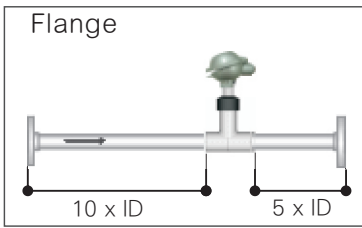

The above common installation configurations are shown to help in selecting the best location in the pipeline for paddlewheel flow sensor.  
Please use KF parameter to calibrate the sensor according to the real install environment if there is no similar installations as the above.

## ■ MOUNTING POSITIONS



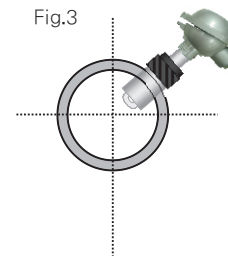


Fig.1: installation with no sediments present  
Fig.2: installation with no air bubbles present  
Fig.3: installation if sediments or air bubbles may be present  
Install sensor in any orientation.  
Upward flow is preferred to ensure full pipe.

## ■ CORRECT/INCORRECT INSTALLATION

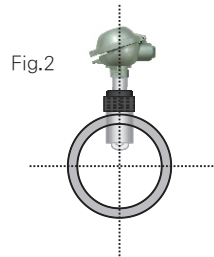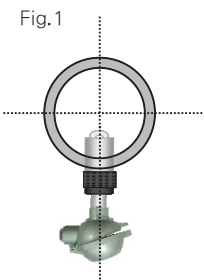