


KEY FUNCTIONS

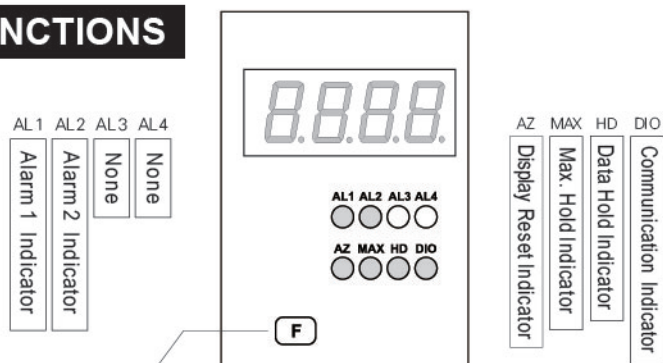

Function Key

Enter Key &
Save KeyShift Key &
Alarm Setting KeyUp Key & Display
Setting KeyDown Key & A/O
Setting KeyMeasuring
StatusEnable the
setting functionParameter
PageEnter to
parameter
groupsParameter
SettingALrSt, oFF
nR4, RP, Hd

Save the value

Move the
cursor left

Increase the digit

Decrease the digit


In any status
can back to
measuring status

ERROR CODE OF SELF-DIAGNOSIS


$10FL$	Input signal is over 120% of input range.
$-10FL$	Input signal is under -10% of input range.
$RdEr$	Input signal is over 180% of input range or meter error.
$doFL$	Input signal is over display range (999999).
$-doFL$	Input signal is under display range (-199999).
$E-00$	EEPROM reading / writing suffers the interference (about 1 million times).

WIRING CONNECTION


● Voltage, Current (AC, DC)

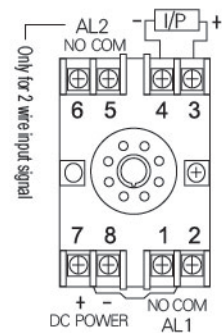


● Temperature (RTD)

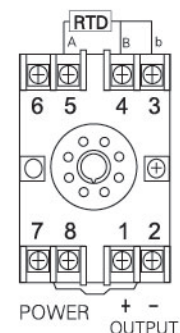


● 2 Wire Sensor

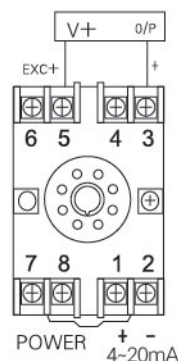


● 3 Wire Sensor

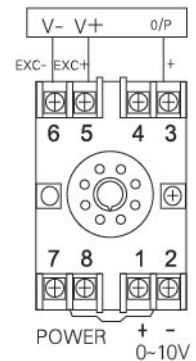

● 4 Wire Sensor or Load cell

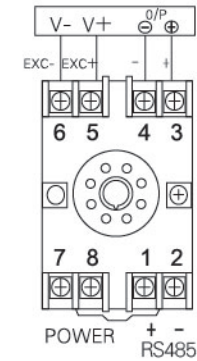

● 2 Wire Resistor

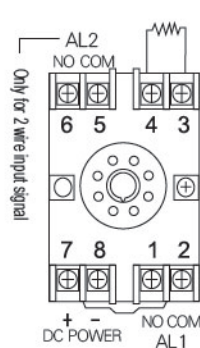

● 3 Wire Potentiometer

